



New Pig

# FloodFence™ - Water Diverter

## Joining Pin & Vertical Gasket Application

Please use the following instructions to assemble an Outer Corner for your FloodFence™ Water Diverter Barrier

### Assembly Instructions:

- To deploy an outer corner – 2 x Inner corners and a joining pin is required.
- Each Joining pin includes 2 x gaskets.
- These loose gaskets should be adhered (simply peel off adhesive layer and stick) one to each inner corner (that make up the outer corner).



Joining Pin



Inner Corner

# Jointing Pin & Vertical Gasket Application



1. To deploy an Outer Corner – 2 x Inner corners (2 x PLSE316), and a Jointing Pin with 2 Gaskets, are required (1 x PLSE318).




2. 1 x Gasket should be applied on each of the two Inner Corners that make up the Outer Corner. Remove adhesive backing from the Gasket.




3. Apply the Gasket down the centre of the Inner Corner, aligning the angled end with the Gasket already in place along the edge of the Inner Corner.

## Jointing Pin & Vertical Gasket Application

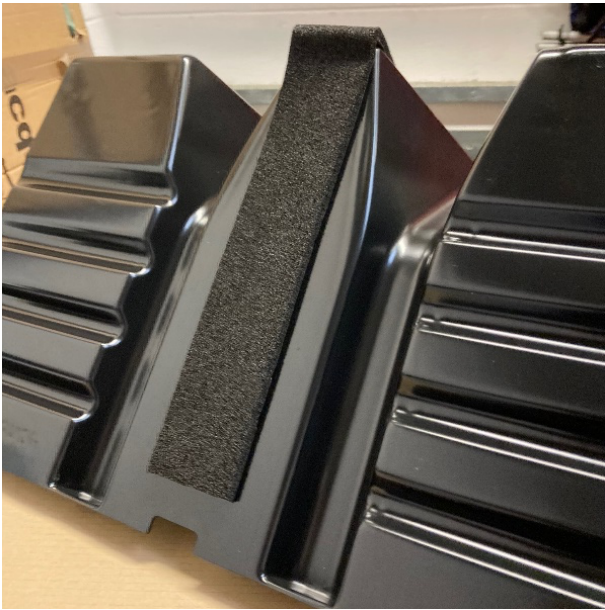

4. Fold the Gasket over the edge, and continue to apply along opposite side of Inner Corner.

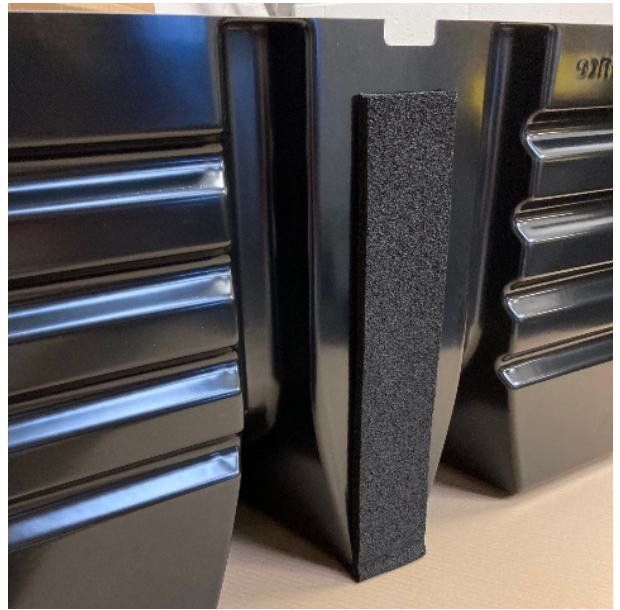

5. Repeat with second Inner Corner & Gasket.



6. Two Inner Corners are then deployed back to back, with the Jointing Pin positioned to compress the Gaskets against each other, thus creating an Outer Corner.

# FloodFence™ - Water Diverter



**New Pig**

New Pig Ltd.  
Hogs Hill, Watt Place,  
Hamilton International Technology Park,  
Blantyre,  
Glasgow. G72 0AH

0800 919 900

[pigpen@newpig.com](mailto:pigpen@newpig.com)

[newpig.co.uk](http://newpig.co.uk)