

PIG Poly Loading Ramp

Assembly Instructions – (PAK726)


Step 1 Select the proper hook bracket (part A or B) from the enclosed hardware packet.

Step 2 Align the first hole behind the bend then hook bracket with the metal screw anchor (2) slots and fasten with self-tapping screw (1).
(DO NOT OVER-TIGHTEN)

Step 3 Insert a self-tapping screw (1) in the remaining hole in the hook bracket.
(DO NOT OVER-TIGHTEN)

Step 4 Repeat steps 1 through 3 for the remaining side.

Hardware List	
(1)	4 self-tapping screws
(2)	2 metal screw anchors
(A)	2 short hook brackets (short hook brackets are used when attaching the ramp to a 2, 6 or 8 drum deck.)
(B)	2 long hook brackets (long hook brackets are used when attaching the ramp to the wider border on the 4 drum deck.)

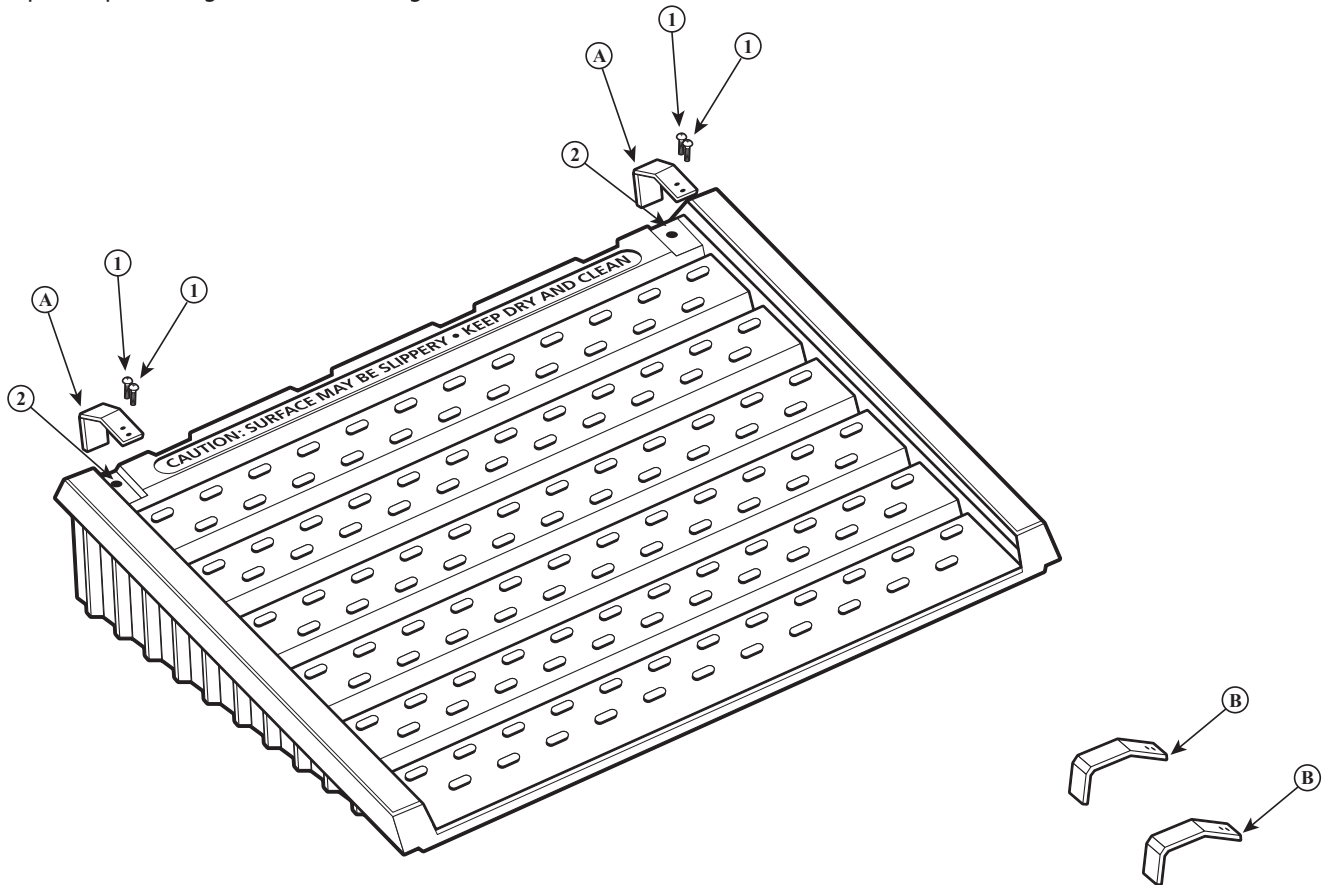

New Pig

One Pork Avenue
Tipton, PA 16684-0304

newpig.com

North America: **1-800-468-4647**

Europe: **+31 (0)76 596 92 50**

China: **+86-21-400 921 5178**

PIG, PIG logo are registered trademarks in USA and other countries. See tm.newpig.com

UK: **0800 919 900**

Outside North America: **+1-814-684-0101**

502440 / 351829