

# PIG Large Surface Folding Pool Instructions for use

The information on the following page(s) was provided by the supplier.  
New Pig assumes no responsibility, obligation, or liability in conjunction  
with the use or misuse of the information.

Technical details on p3:

Stocked Item# PAKE915, reference vendor item# ET LARGE 111 Set

Stocked Item# PAKE916, reference vendor item# ET LARGE 333 Set

Stocked Item# PAKE917, reference vendor item# ET LARGE 444 Set

Stocked Item# PAKE918, reference vendor item# ET LARGE 555 Set

For any other items, please enquire.




**Hogs Hill, Watt Place, Hamilton International Technology Park, Blantyre, Glasgow G72 0AH**  
Tel: 0800 919 900 | Fax: 0800 731 50 71 | [pigpen@newpig.com](mailto:pigpen@newpig.com)

**Concorde 5, 5126 RM GILZE, The Netherlands**  
Tel: +31(0)76 596 9250 | Fax: +31(0)76 596 9252 | [pigpost@newpig.com](mailto:pigpost@newpig.com)

This document describes the operation and characteristics of the Large Surface Folding Pool (hereinafter „pool“). It contains important information about how to use the pools properly and how to increase their reliability and life. This document must always be available in the place where the pools are used. Keep it together with the pools at all times. The operator is responsible for using the pools safely and in compliance with the instructions in this manual, which applies to any third persons as well. If you have any doubts about the correct use of the pools, please contact the manufacturer or an authorized dealer.

Large Surface Folding Pools are designed primarily for mobile use as a protection against leakage of hazardous substances into the soil and water, eg. during repairs or cleaning of vehicles and machines decontamination and washing of all types of vehicles. They have a shapeable construction, drive through and can be manufactured in any size required by the customer.

## Large Surface Folding Pool

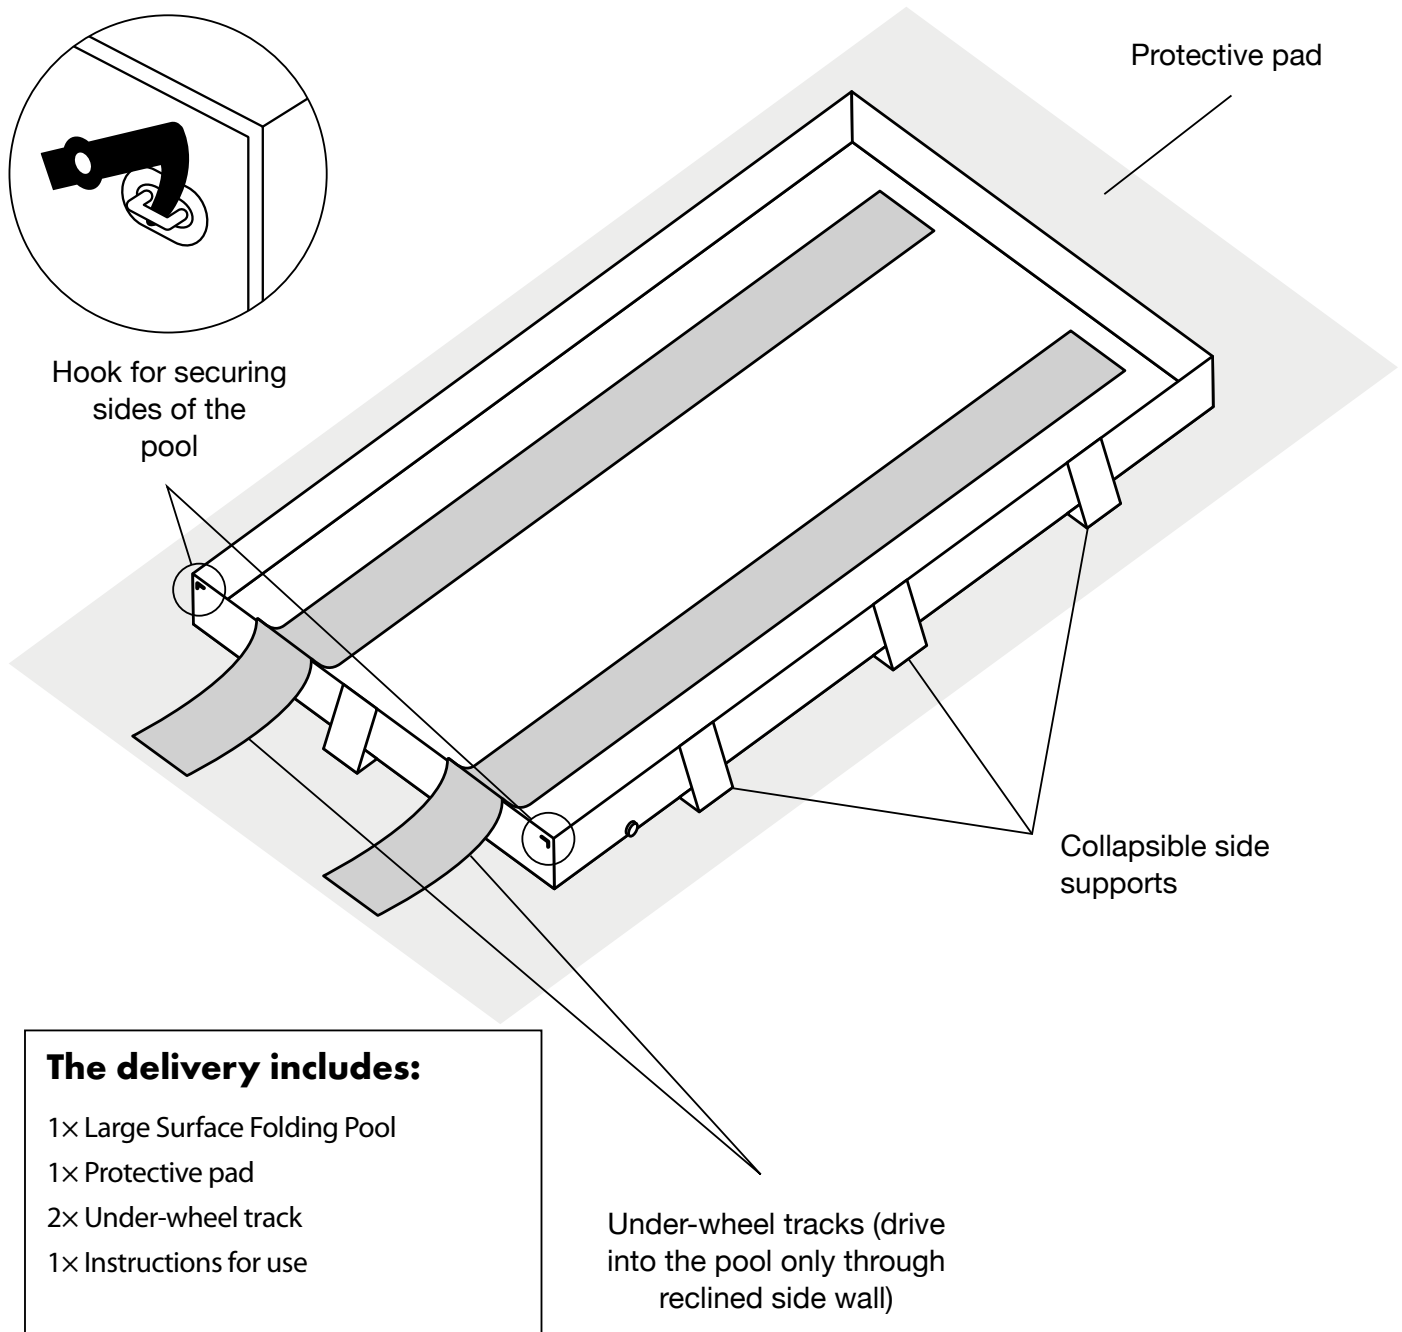


## Specification of types of Large Surface Folding Pools

Large Surface Folding Pools have welded corners, yet they enable complete unfolding to a flat surface, entering into the pool, eg. by a car or other vehicle, and to be easily washed after usage.

Large Surface Folding Pools are produced in several basic sizes, but we also produce pools and pools according to individual customer requirements.

### Technical details

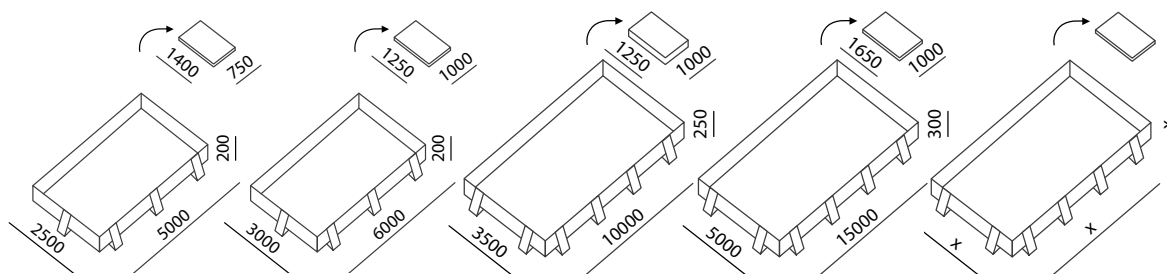

Type	ET LARGE 111	ET LARGE 333	ET LARGE 444	ET LARGE 555	ET LARGE INDIVID
<b>Dimensions (mm)</b>	5000 × 2500 × 200	6000 × 3000 × 200	10000 × 3500 × 250	15000 × 5000 × 300	dimensions/ colour according to customer's requirements (x)
<b>Capacity (l)</b>	2500	3600	8750	22500	
<b>Dimensions when folded up (mm)</b>	1400 × 750 × 150	1250 × 1000 × 150	1250 × 1000 × 350	1650 × 1000 × 200	
<b>Weight (kg)</b>	51	76	150	275	

# General information


When using the pools, observe these instructions as well as all the safety notices herein.

1. The pools are designed as fast solution for emergency situations. They are intended for catching hazardous substances leaking into the environment.
2. They are produced in different dimensions.
3. Their structure can be shaped and adapted to uneven surface and other obstacles.
4. The pools are self-supporting.
5. They are made of a chemically resistant material – PVC with a protective proofing layer (PES/PVC 900 g/m<sup>2</sup>) – see Chemical resistance certificate, p. 7.
6. The pools are not intended for long-term storage of aggressive substances.
7. The range of temperatures for the use of the pools is from -30 °C to +70 °C.
8. As a standard, the pools are delivered in transport bags.
9. In order to increase the life of the pools you must always use the following accessories: protective pad and under-wheel tracks which are part of the product on standard models.


## Instructions for putting the pool into the ready-to-use position

Take the pool and the accessories out of the transport bag. Place a protective pad on the cleaned surface and spread the pool on a flat surface. By lifting the sides, securing the corners with yellow hooks and securing the collapsible side supports, the LARGE folding pool is simply created.

### Illustrated instructions for assembly of Large Surface Folding Pool

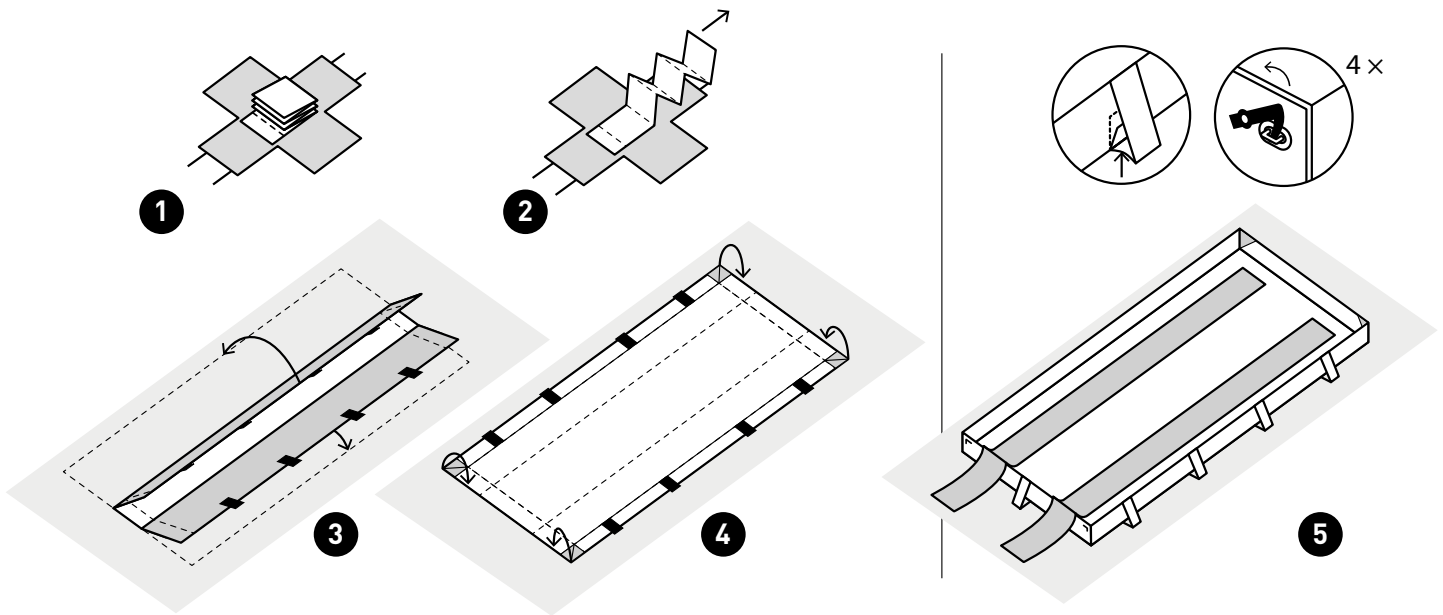

## Handling instructions and safety warnings

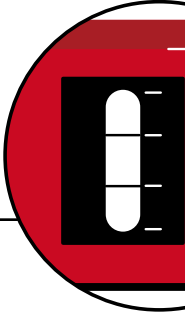1. Put the pool onto a flat surface, if possible.
2. Make sure there are no sharp objects under the pool, such as pieces of broken glass, nails, sharp stones, etc., which might mechanically damage its bottom.
3. Do not put the product near fire or any other sources of heat.
4. The range of temperatures for the use of the pools is from -30 °C to +70 °C.
5. The pools are resistant to a large number of different liquids and loose materials – see the Chemical resistance certificate, p. 7.
6. The pools are not intended for long-term storage of aggressive substances.
7. Fill the pool up only to the upper weld joint of the reinforcement. A circular diagram with a red background showing a cross-section of a pool's reinforcement. A black rectangular area represents the reinforcement, with a white vertical bar in the center. A white arrow points to the top edge of the black area, indicating the upper weld joint.
8. Do not move or pull an empty or a filled pool on the ground – the manufacturer's warranty does not cover mechanical damage.
9. After each use it is necessary to wash the pool thoroughly, clean it with suitable detergents and let it dry completely.
10. Observe the safety measures for working with hazardous liquids and with substances harmful to the environment.
11. Make sure you observe any necessary precautions regarding personal safety, such as the use of protective equipment.

## Accessories to Large Surface Folding Pools

Standard models of LARGE Folding Pools are supplied with under-wheel tracks and a protective pad, which significantly extend the life of the pool. The following optional accessories for LARGE Folding Pools are provided for a surcharge.

Type	ET LARGE 111	ET LARGE 333	ET LARGE 444	ET LARGE 555	ET LARGE INDIVID
<b>Standard accessories</b>					
<b>Transport bag</b>	yes	yes	yes	yes	yes
<b>Protective pad (mm)</b>	5500 × 3000	6500 × 3500	11000 × 4500	16000 × 6000	yes
<b>Under-wheel tracks (mm)</b>	6000 × 600	7000 × 600	11000 × 600	16000 × 600	yes

## Maintenance and storage

After the draining and prescribed environment-friendly disposal of the collected substance, the product must be washed with proper neutralization detergent (in the case of aggressive substances) and lukewarm water or another suitable detergent. We recommend storing the pools folded in the carrying bag so that they are not damaged while not in use. The pool must be dried thoroughly before it is put into the bag. For long-term storage, place the pool in a dry place out of the reach of UV radiation.

---

## Disposal

The product must be disposed of in compliance with applicable legal regulations and with the user's internal directives.

# Chemical resistance certificate

Applicable to all types of Collapsible Spill Bunds, Tanks, Funnels, Drip trays and Protective Liners

## Resistance levels:

- A) resistant
- B) resistant for at least 3 hours
- C) non-resistant

Name of substance	Chemical formula	Resistance level at the temperature of 20 °C	Resistance level at the temperature of 60 °C
<b>LIQUID SUBSTANCES</b>			
Acetone	CH <sub>3</sub> COCH <sub>3</sub>	C	C
Acetonitrile	CH <sub>3</sub> CN	A	A
Ammonia	NH <sub>3</sub>	A	A
Benzene	C <sub>6</sub> H <sub>6</sub>	B	B
Tar	mixture	C	C
Dimethylformamide	C <sub>3</sub> H <sub>7</sub> NO	A	A
Ethanol	C <sub>2</sub> H <sub>5</sub> OH	B	B
Ethylene glycol	C <sub>2</sub> H <sub>6</sub> O <sub>2</sub>	B	B
Ethyl acetate	C <sub>4</sub> H <sub>8</sub> O <sub>2</sub>	C	C
Ethylbenzene	C <sub>8</sub> H <sub>10</sub>	A	A
Formaldehyde	CH <sub>2</sub> O	B	B
Chlorine	Cl	C	C
Chloroform	CHCl <sub>3</sub>	C	C
Transformer oil		A	A
Gear oil		B	B
SAE 40 oil		A	A
Lubricating oil		A	A
Silicone oil		A	A
Turpentine distillates		B	B
Hydrochloric acid	HCl	B	B
Nitric acid	HNO <sub>3</sub>	B	B
Phosphoric acid	H <sub>3</sub> PO <sub>4</sub>	A	B
Formic acid	HCOOH	B	B
Acetic acid	CH <sub>3</sub> COOH	A	B
Sulphuric acid	H <sub>2</sub> SO <sub>4</sub>	A	B
Sulphurous acid	H <sub>2</sub> SO <sub>3</sub>	A	B
Isopropyl alcohol	C <sub>3</sub> H <sub>8</sub> O	B	B
Methanol	CH <sub>3</sub> OH	B	B
Methylene chloride	CH <sub>2</sub> Cl <sub>2</sub>	C	C
Sodium chloride solution 20%	NaCl	A	A
Mercury	Hg	A	A

Name of substance	Chemical formula	Resistance level at the temperature of 20 °C	Resistance level at the temperature of 60 °C
Hydrogen sulphide	H <sub>2</sub> S	A	B
Styrene	C <sub>8</sub> H <sub>8</sub>	A	A
Pentane	C <sub>5</sub> H <sub>12</sub>	A	A
Toluene	C <sub>6</sub> H <sub>5</sub> CH <sub>3</sub>	C	C
Salt water		A	A
Water	H <sub>2</sub> O	A	A
Hydrogen peroxide	H <sub>2</sub> O <sub>2</sub>	A	A
Kerosene	C <sub>9</sub> -C <sub>16</sub>	B	B
<b>SOLID SUBSTANCES</b>			
Ammonium acetate	CH <sub>3</sub> COONH <sub>4</sub>	A	A
Borax	Na <sub>2</sub> [B <sub>4</sub> O <sub>5</sub> (OH) <sub>4</sub> ]·8H <sub>2</sub> O	A	A
Sugar	mixture	A	A
Potassium cyanide	KCN	A	A
Ammonium nitrate	NH <sub>4</sub> NO <sub>3</sub>	A	A
Calcium nitrate	Ca(NO <sub>3</sub> ) <sub>2</sub>	A	A
Phenol	C <sub>6</sub> H <sub>5</sub> OH	B	B
Ammonium phosphate	(NH <sub>4</sub> ) <sub>3</sub> PO <sub>4</sub>	A	A
Potassium nitrate	KNO <sub>3</sub>	A	A
Potassium	KOH	A	A
Sodium hydroxide	NaOH	A	A
Ammonium chloride	NH <sub>4</sub> Cl	A	A
<b>OPERATING FLUIDS</b>			
Petrol		B	B
Diesel fuel		B	B
Motor oil		B	B
Methyl tert-butyl ether (MTBE)	C <sub>5</sub> H <sub>12</sub> O	B	B
Hydraulic oils		B	B

## Notice:

Eccotarp collapsible products are compatible to varying degrees with the substances listed above.

However, given the almost unlimited number of potential combinations of chemicals plus the influence of factors such as concentration and temperature, this list does not claim to be definitive and is only intended for informative purposes in predicting the behaviour of the chemicals concerned.

Compatibility with the listed substances cannot be entirely guaranteed. Neither the manufacturer nor the distributor provides any warranty, nor do they accept any responsibility for resultant damage.

For a reliable estimate of the level of resistance to a specific substance, we recommend you to test small samples using miniature laboratory funnels which can be provided upon request by the manufacturer



The Eccotarp collapsible products are not intended for long-term storage of retrieved spilt liquids. They were developed first and foremost for rapid use in emergencies, for capturing hazardous substances during the time immediately before its correct disposal.